



CRF125

TBW1619 shock installation notes.


- Remove the seat and side plastics to help with installation.
- Remove and install the new shock from the bottom of the bike.
- Move the rear tire up/down to remove/install the new shock (be careful not to pinch your fingers, this is much easier with 2 people).

Remove the lower suspension knuckle before trying to remove/install the rear shock.

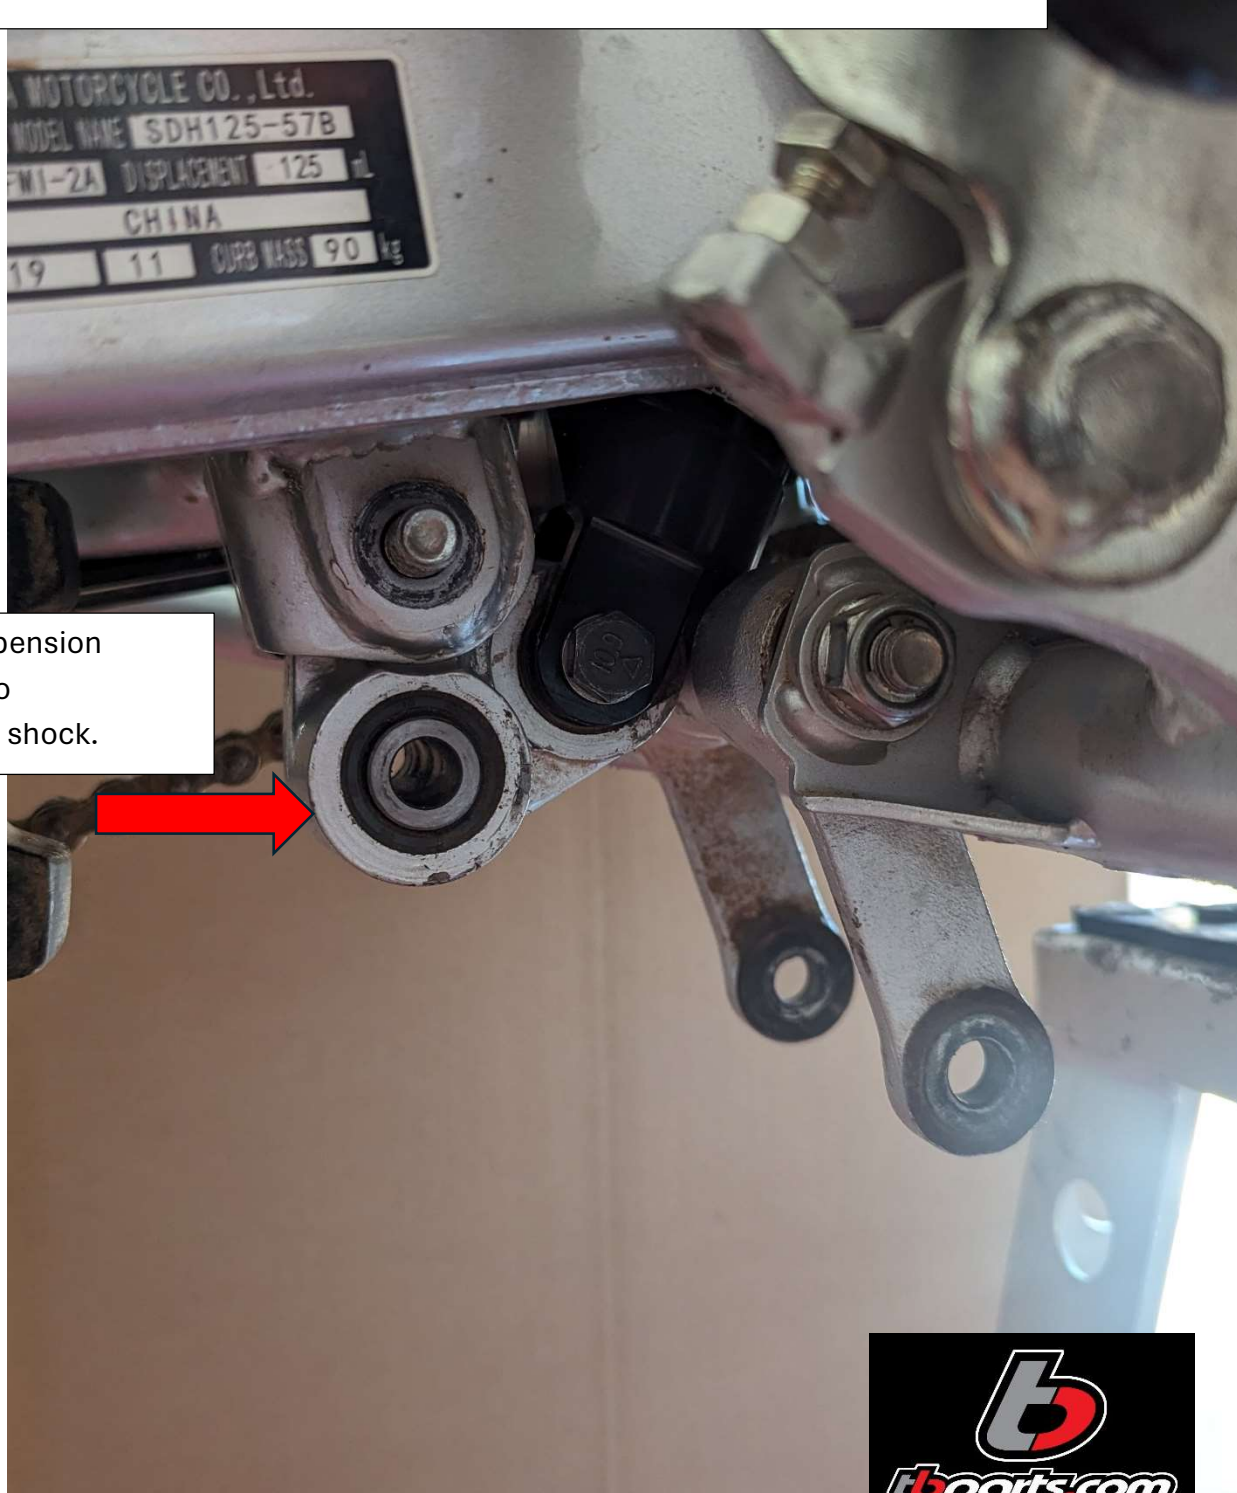

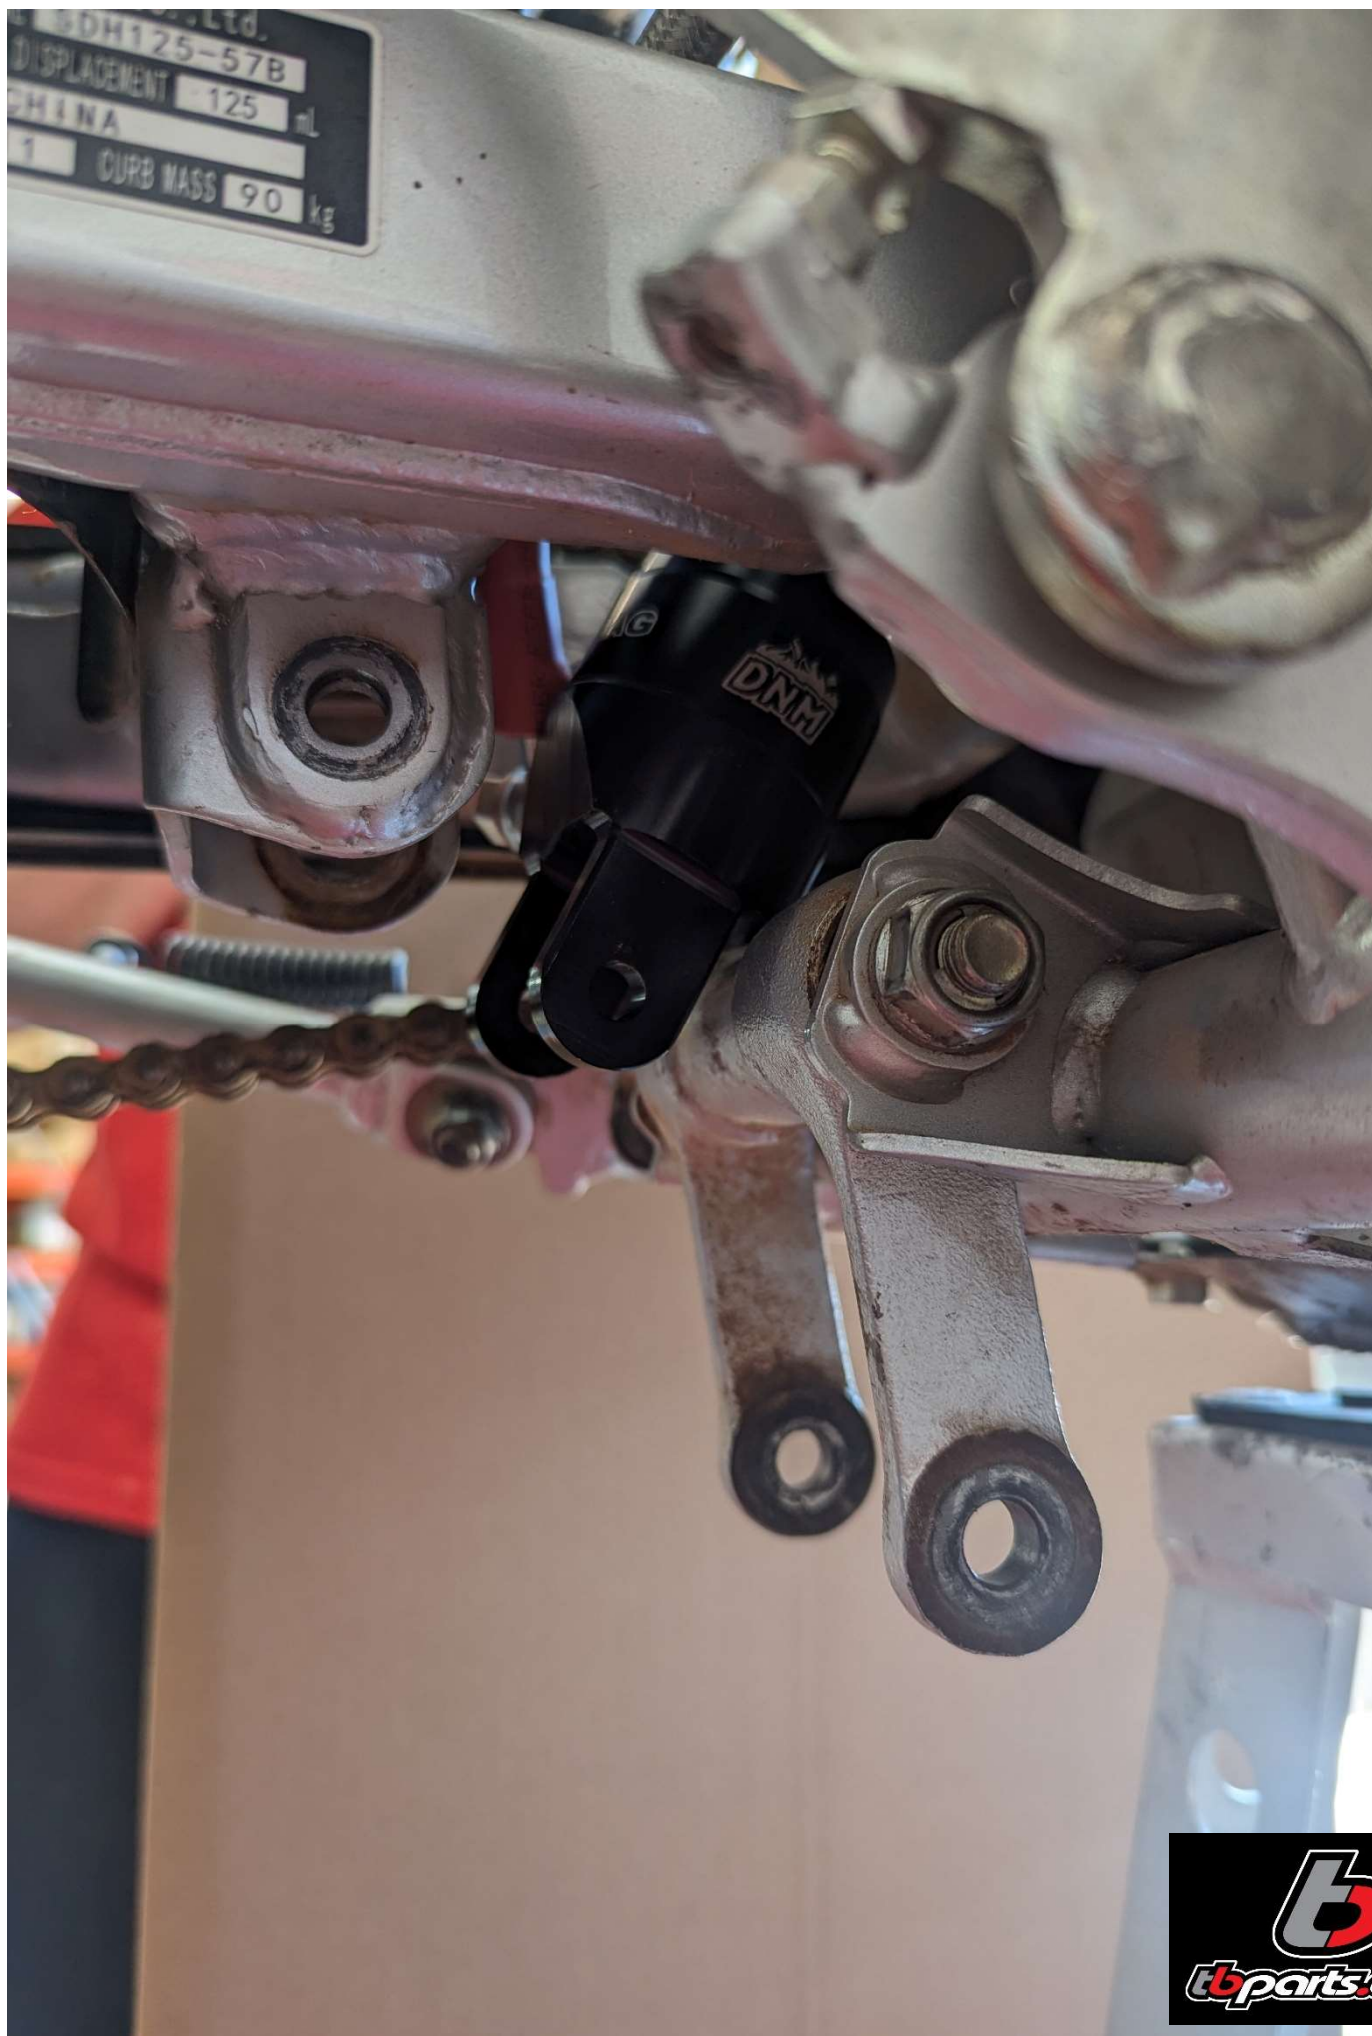


SDH125-57B  
DISPLACEMENT 125 mL  
CHINA  
1 CURB MASS 90 kg

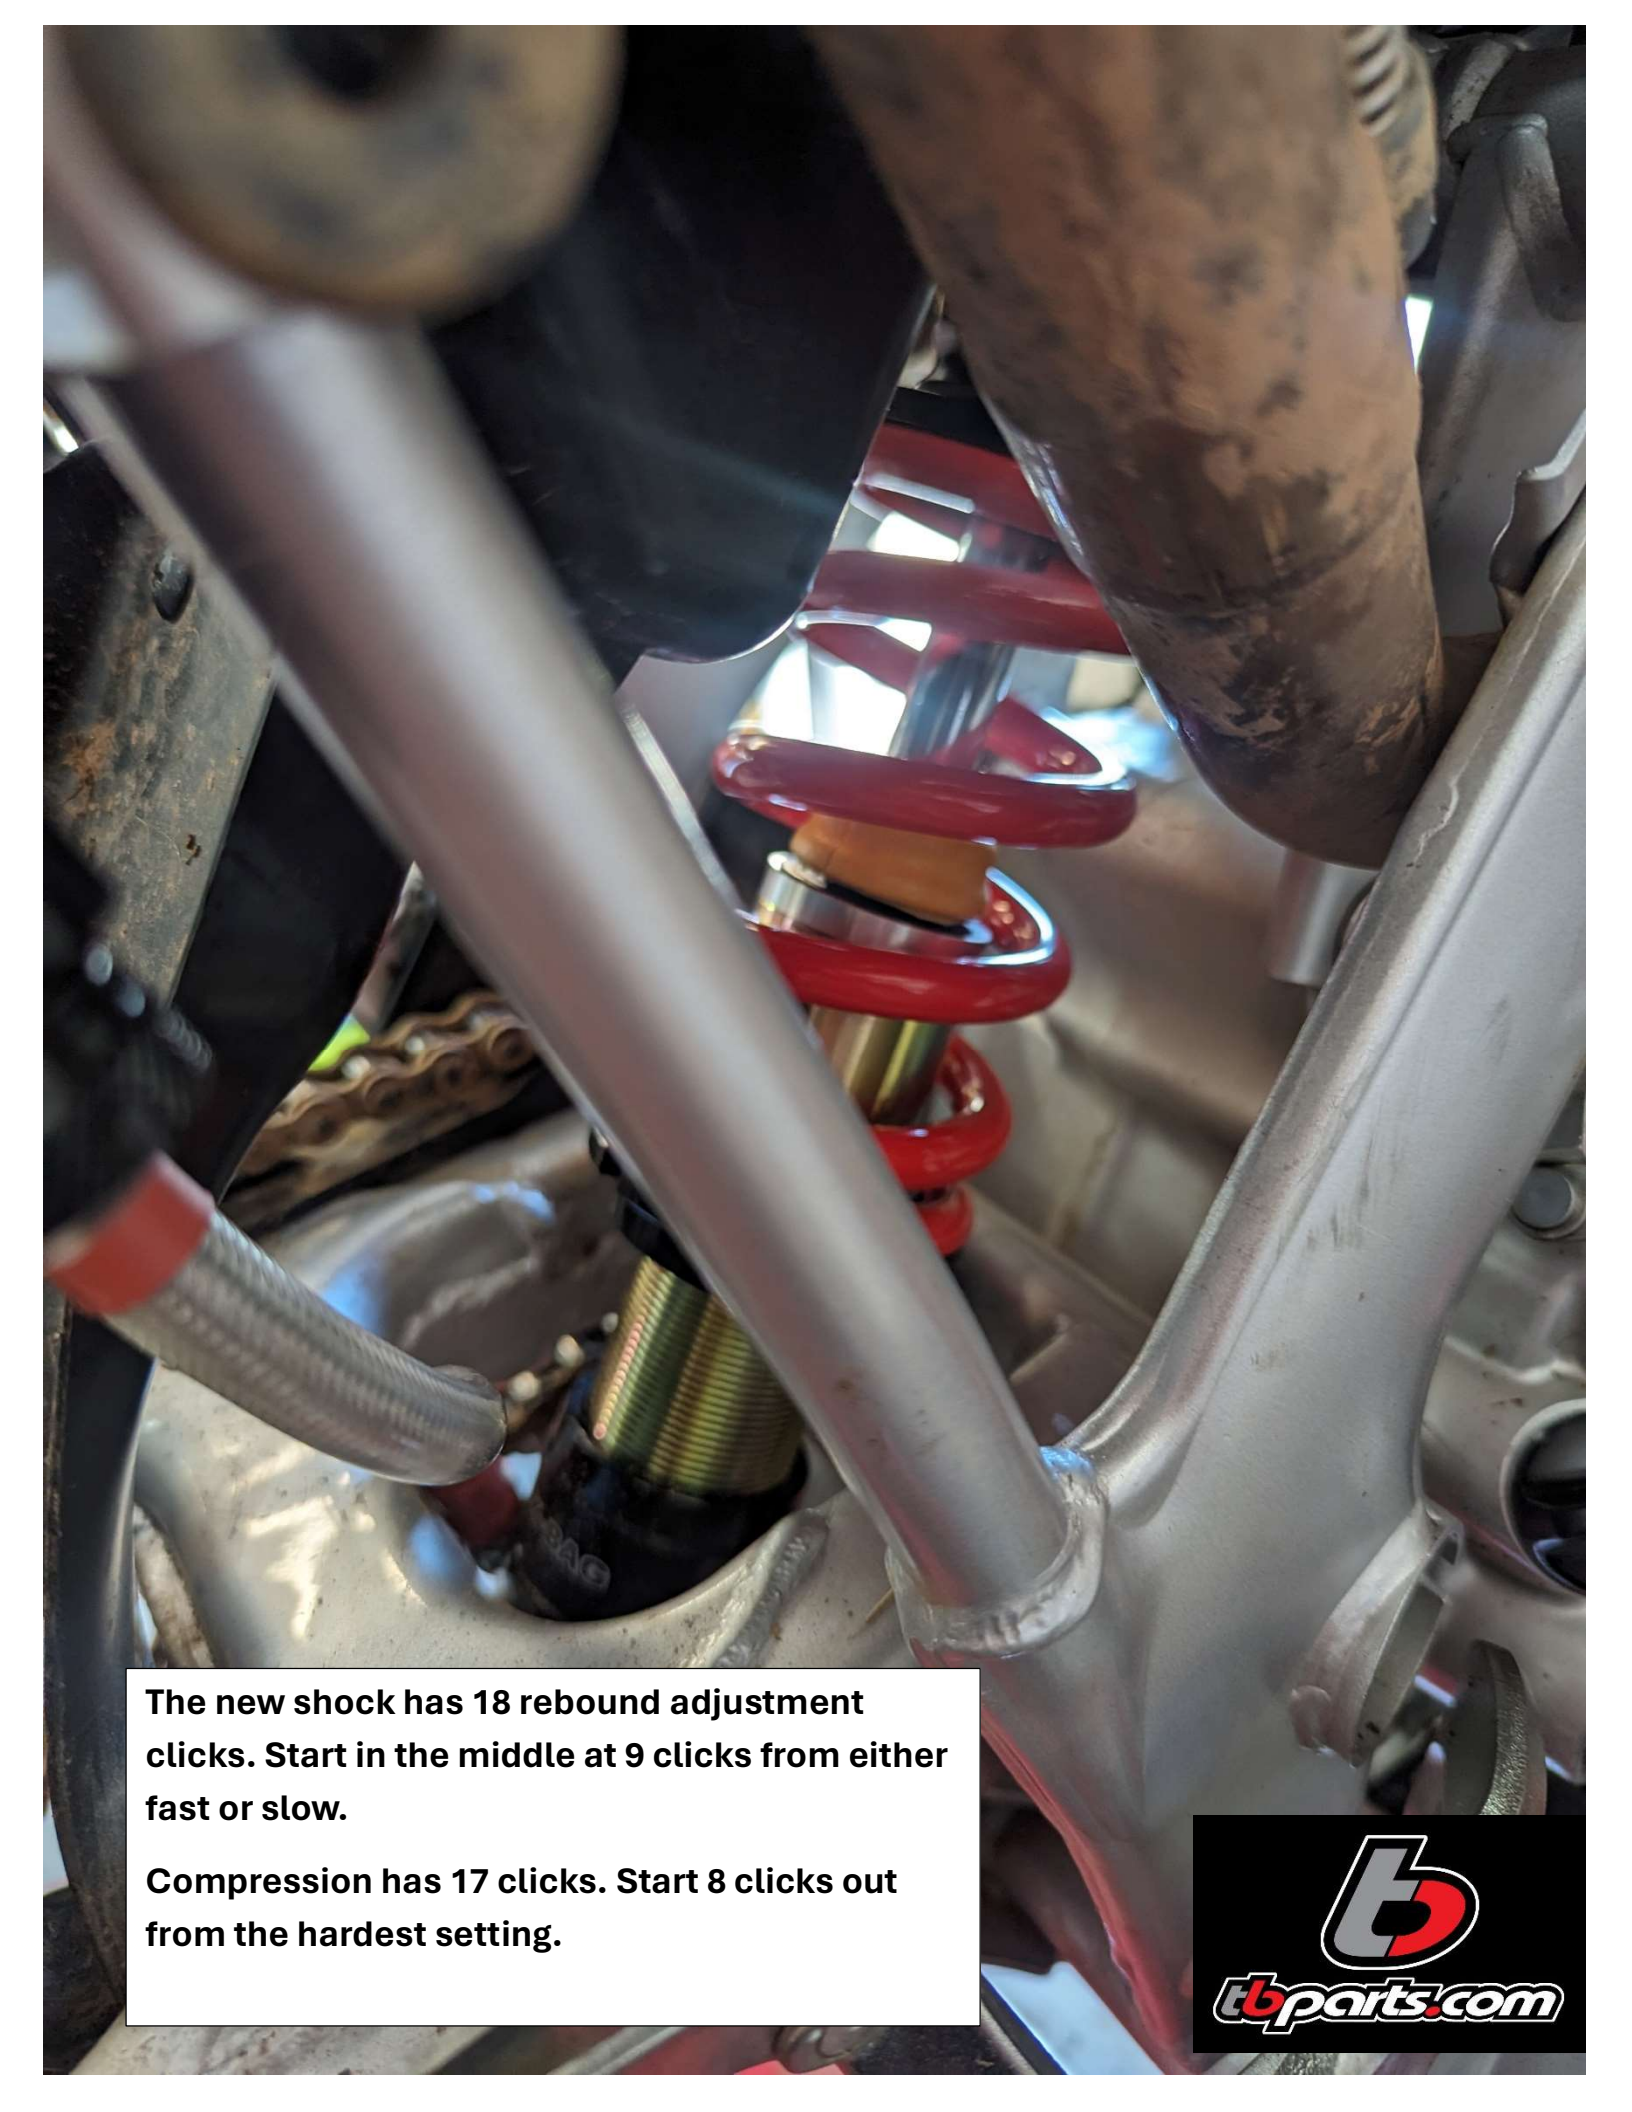

The new shock has 18 rebound adjustment clicks. Start in the middle at 9 clicks from either fast or slow.

Compression has 17 clicks. Start 8 clicks out from the hardest setting.



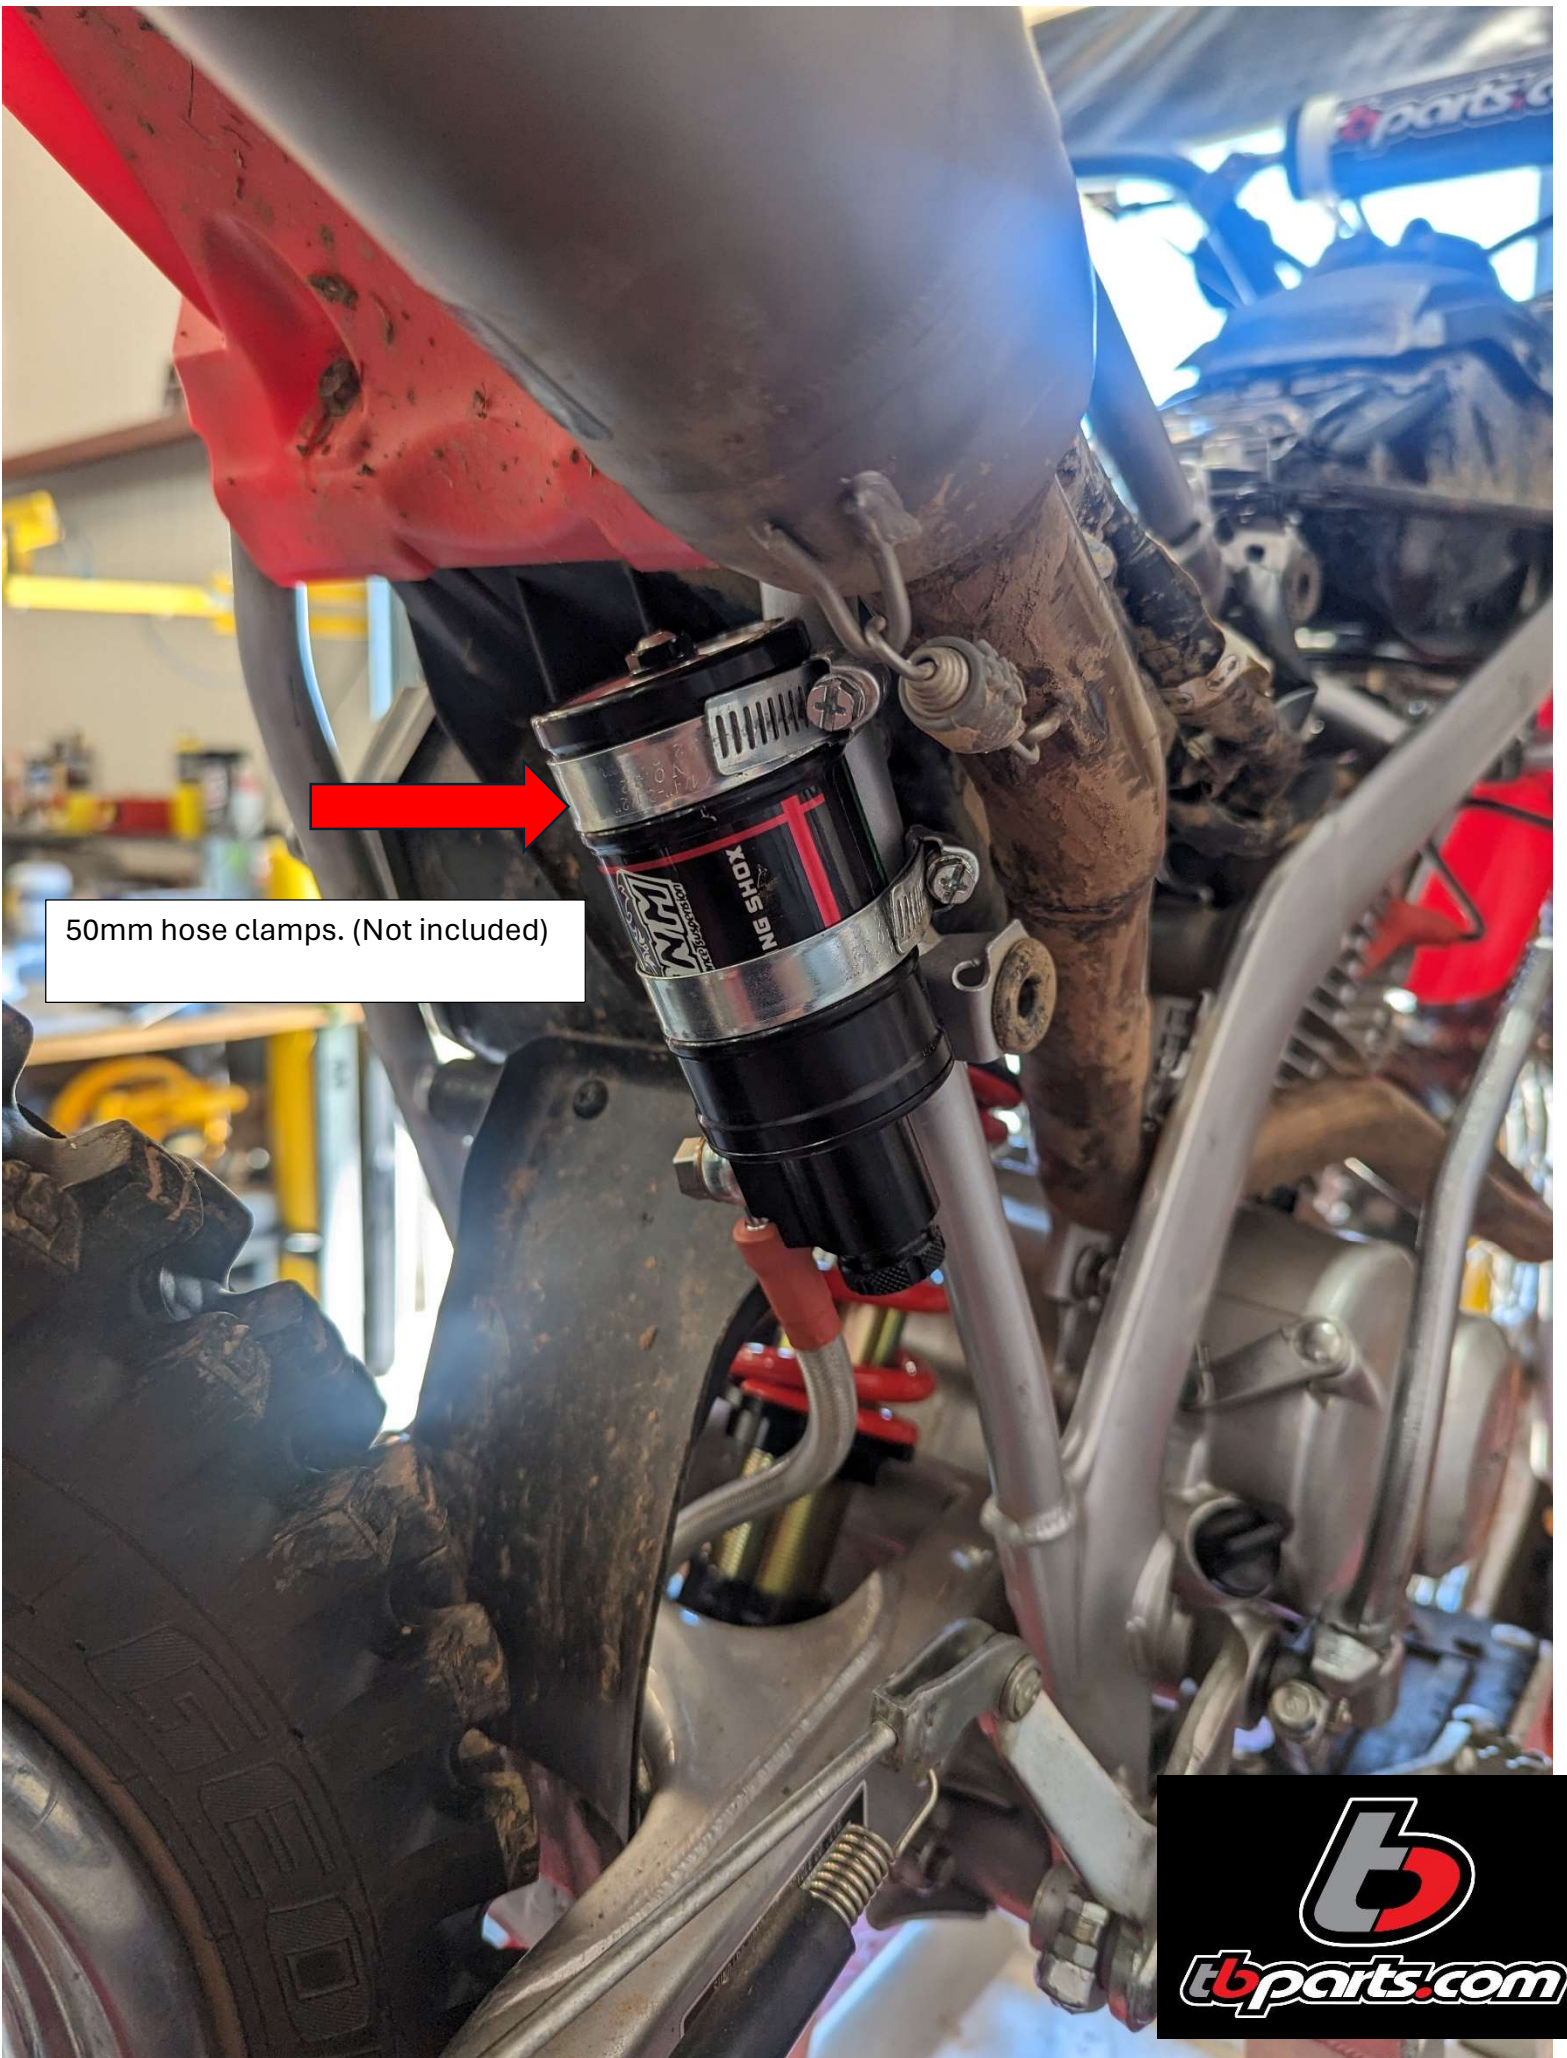

50mm hose clamps. (Not included)

